


# ARENDAL®

1528













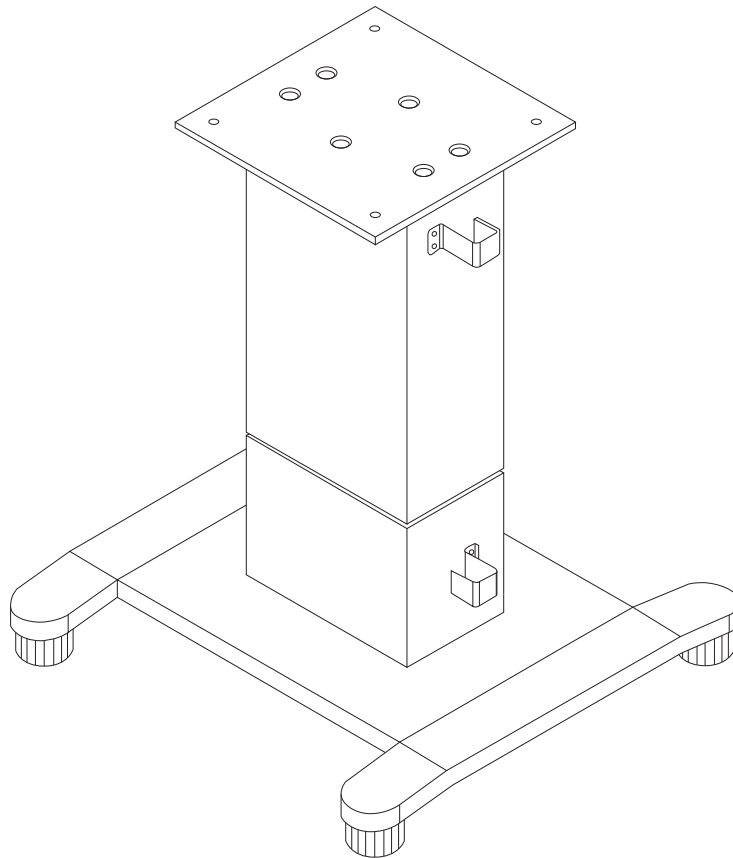


STAND

8

## ASSEMBLY INSTRUCTIONS




# C O N T E N T S


|   |  |   |   |  |
|---|--|---|---|--|
| <b>2x</b><br>Base<br>Supports  | <b>1x</b><br>Base<br>Plate    | <b>1x</b><br>Top<br>Plate    | <b>1x</b><br>Column    | <b>4x</b><br>Puck+<br>absorption feet                     |
| <b>2x</b><br>Cable<br>Guides   | <b>12x</b><br>M8 Screws<br>for mounting the top and base<br>plates to the column  | <b>8x</b><br>M6 screws<br>for mounting the base supports to<br>the base plate  | <b>4x</b><br>M6 screws<br>to fix the speaker to the top plate  | <b>4x</b><br>T15 screws<br>for mounting the cable guides  |
| <b>1x</b><br>M8 Hex Key        | <b>1x</b><br>M6 Hex Key   | <b>1x</b><br>T15 Torx Key    | <b>4x</b><br>Hard floor<br>sliders                             | <b>4x</b><br>Carpet<br>sliders                            |

# A S S E M B L Y

- 1** Position the base plate on top of the two base supports, then secure them by tightening the 8x M6 screws.  
*Note: The cutout on the base supports should be oriented as shown below.*

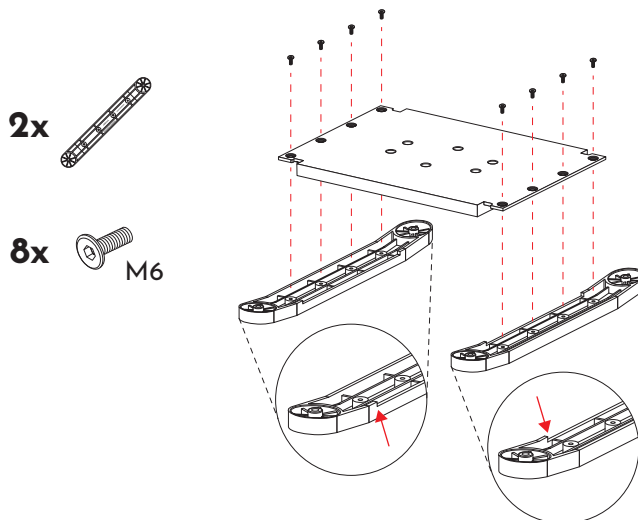


- 2** Screw in the 4x Puck+ feet

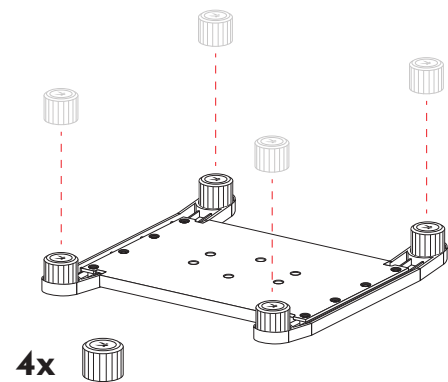


3

Attach column to base plate with 6x M8 screws

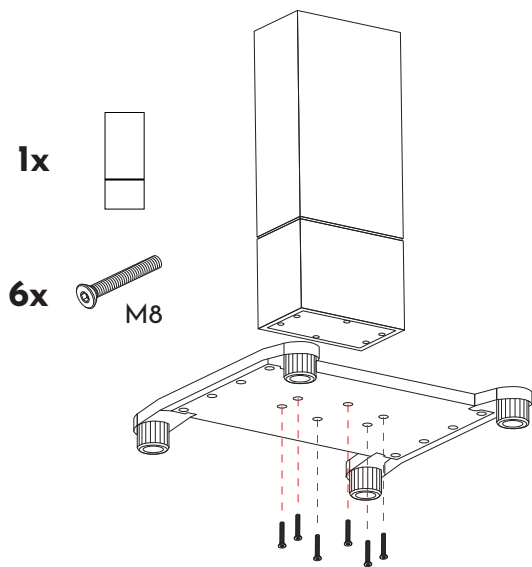


4

Attach top plate to the column with 6x M8 screws

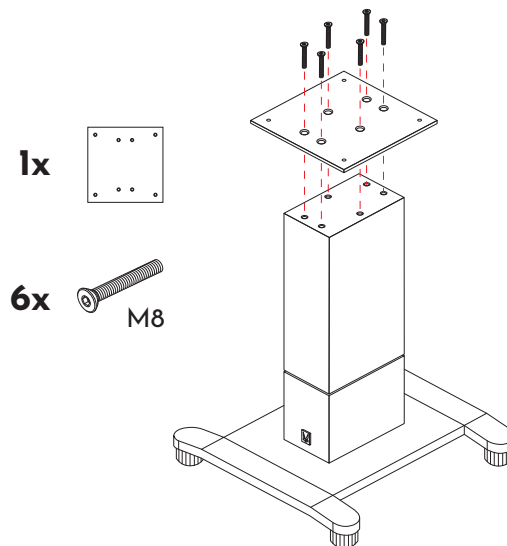


5

Attach the 2 cable guides with 4x T15 Torx screws

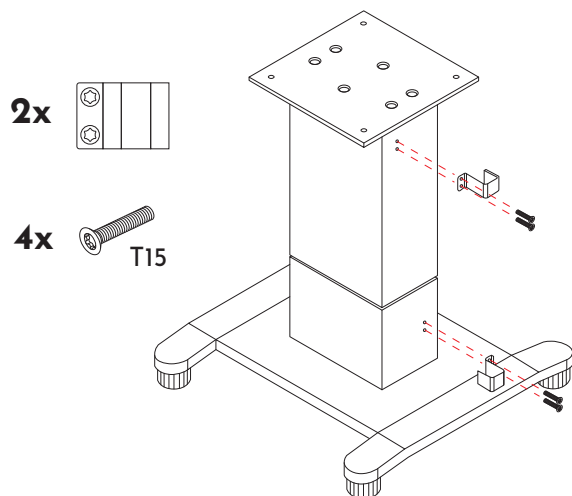


6

Place speaker on top plate, align the thread inserts with the holes on the top plate and secure with 4x M6 screws.

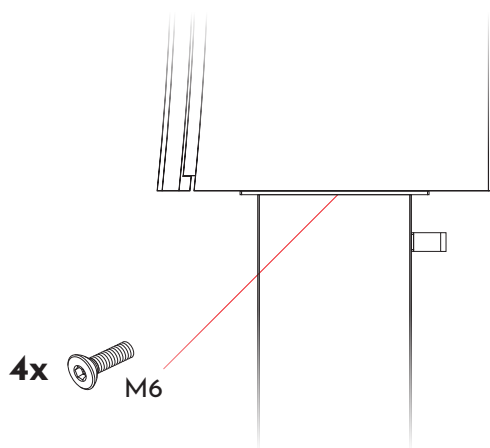

7

Fasten your seatbelt and press **Play**.

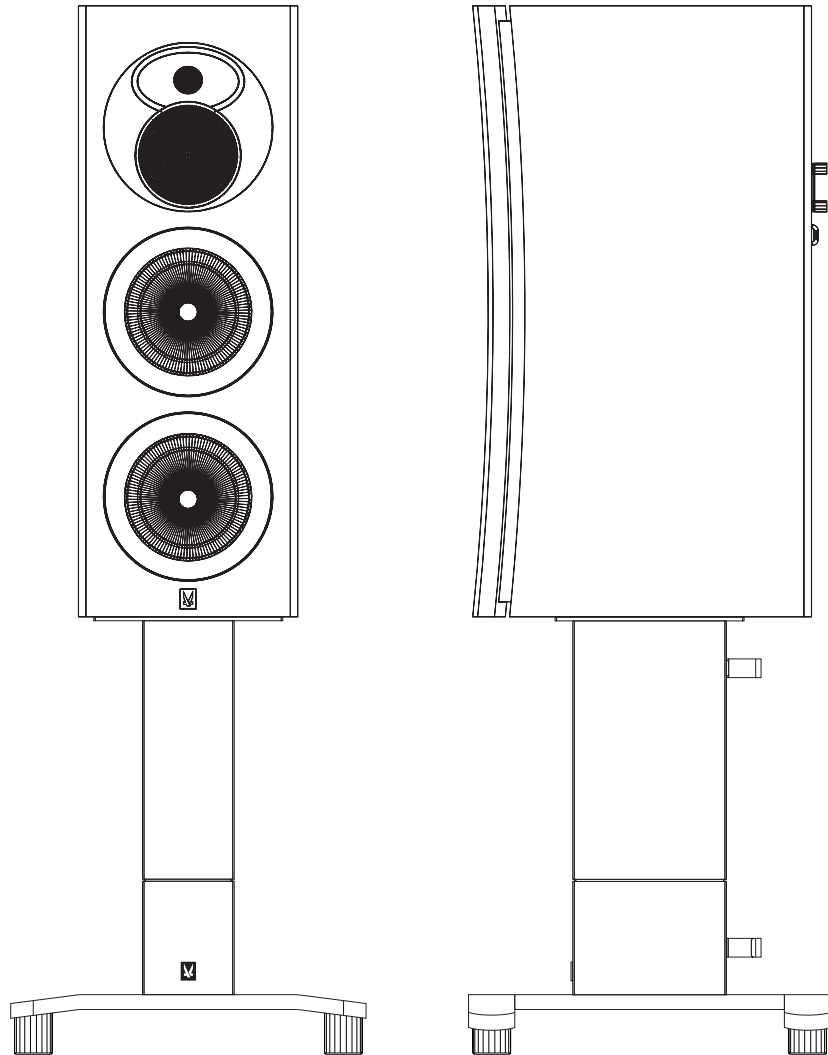

**Disclaimer:** Do not walk the Stand 8 on its rubber Puck+ (or optional Puck Pro) feet it will cause damage. Always use the floor sliders!

ARENDALSOUND.COM